


HIRE ATTACHMENT FOR STR-MASTIC REMOVAL TOOL DS4

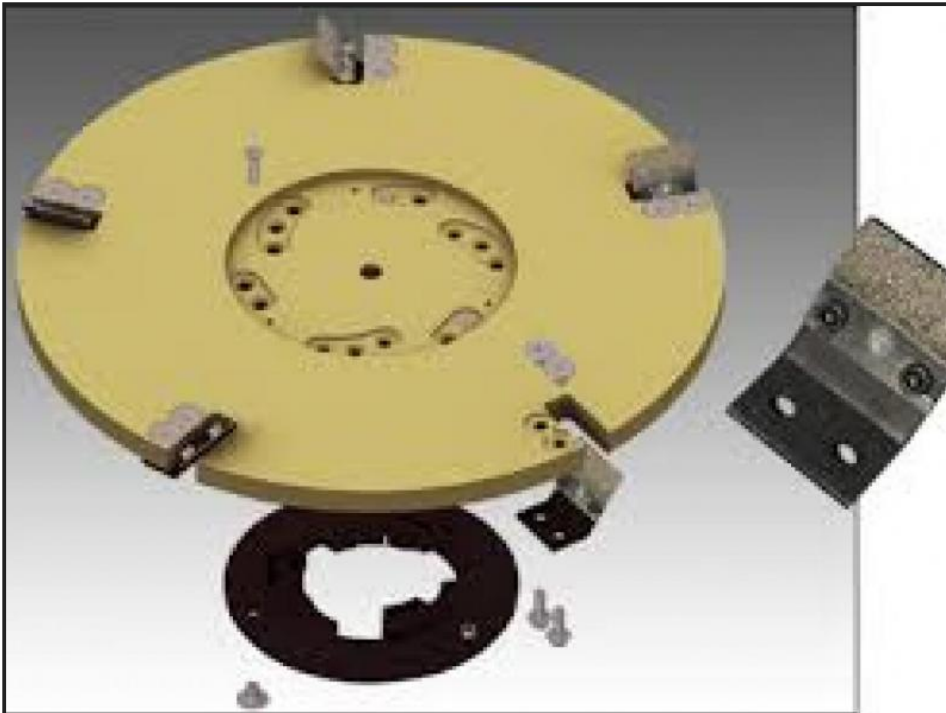

© 2010 by the copyright owner. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage or retrieval system, without the prior written permission of the copyright owner.

Caution: The Manufacturer's Manual for the floor machine and operating instructions. The tool manufacturer is not responsible for damage to the floor, the floor machine or for any harm or injury resulting from use of this tool.

These warnings contain advice on possible device application circumstances. They are intended to inform you of the potential risks of floor. These warnings do not contain a complete list of all possible risks that are applicable to this tool.

Standard Operating Procedures for Mastic Tool

- 1) Always use the correct protective equipment such as eye protection, safety glasses, machine shoes and ear protection.
- 2) Always make sure the floor is prepared and free of debris or grouting of existing job site for the floor.
- 3) Remove the floor surface and cover.
 - a. Use three holes to the floor if no make repair as necessary.
 - b. Cap wire to be applied to floor.
- 4) Insert a small, nonconductive strip of floor material, such as a piece of wood.
- 5) Prepare a mastic removal area.
- 6) Make a test run.

Always keep the machine held in your possible operation setting.

- 1) Prepare a mastic removal system on a separate circuit.
- 2) Machine must be on the machine and floor to use.
 - a. Start machine. Do not jump and use.
 - b. Immediately after the machine has started, **hold the tool on the floor.**
 - c. The tool of the tool on the floor, moving left to right (Control wheel to the left).
 - d. After starting, and hold the tool on the floor. Do not use with the control wheel face.
- 3) Work the tool and use until the mastic is removed.

Weekly Hire: £55.00

This attachment when fitted to the STR machine can remove most mastic-type products from most concrete surfaces, due to its design it doesn't block up as much as other attachments, can be used wet or dry.

Product Details	
Category/Type	STR FLOOR MACHINE
Make	HIRE ATTACHMENT FOR STR-
Model	MASTIC REMOVAL TOOL DS4
Power	N/A
Weight	10KG