

50 KVA 3 PHASE GENERATOR



CONNECTING A GENERATOR TO RUN A THREE PHASE APPLIANCE



PHASE INVERTER PLUG FITTED

TAIL ADAPTOR MAY BE USED TO CONNECT TO 63AMP SOCKET AND GIVE 32AMP CONNECTION OR MAY BE DIRECT CONNECTION



3 PHASE 415V 32AMP 5 PIN EXTENSION LEADS,



TAIL ADAPTOR MAY BE USED TO CONNECT TO 16AMP SOCKET AND GIVE 32AMP CONNECTION OR MAY BE DIRECT CONNECTION.



- CONNECT APPLIANCES AS ABOVE FROM THE GENERATOR TO THE APPLIANCE
- START GENERATOR UP AND MAKE SURE APPLIANCE IS RUNNING
- THEN CHECK THE APPLIANCE IS GOING THE CORRECT WAY
- THIS MEANS ON A FLOOR SAW THAT THE BLADE IS CUTTING DOWN
- IF NOT FIRST TRY TO SWITCH THE **L1,L2,L3** AT THE GENERATOR
- IF DOESNT TURN THE APPLIANCE MAY HAVE A PHASE ROTATION PLUG FITTED TO WHICH A FLAT BLADE SCREWDRIVER CAN BE USED TO TURN PHASES OVER.
- IF NOT THE L2 AND L3 WIRE HAS TO CHANGED INSIDE PLUG AT FLOOR SAW

