



WEHIRE
SURFACE PREPARATION
EQUIPMENT
TEL 01633 619129

**CONNECTING A GENERATOR TO RUN A
 THREE PHASE FLOOR SAW 700MM**



PHASE INVERTER PLUG FITTED



3 PHASE 415V 32AMP 5 PIN
 EXTENSION LEADS,



TAIL ADAPTOR MAY BE USED
 TO CONNECT TO 16AMP
 SOCKET AND GIVE 32AMP
 CONNECTION OR MAY BE
 DIRECT CONNECTION.



**24KVA PETROL
 GENERATOR
 3 PHASE 32AMP**

- CONNECT APPLIANCES AS ABOVE FROM THE GENERATOR TO THE APPLIANCE
- START GENERATOR UP AND MAKE SURE APPLIANCE IS RUNNING
- THEN CHECK THE APPLIANCE IS GOING THE CORRECT WAY
- THIS MEANS ON A FLOOR SAW THAT THE BLADE IS CUTTING DOWN
- IF DOESNT TURN THE APPLIANCE MAY HAVE A PHASE ROTATION PLUG FITTED TO WHICH A FLAT BLADE SCREWDRIVER CAN BE USED TO TURN PHASES OVER.
- IF NOT THE L2 AND L3 WIRE HAS TO CHANGED INSIDE PLUG AT FLOOR SAW

