

24KVA PETROL GENERATOR




WE HIRE
SURFACE PREPARATION
EQUIPMENT
TEL 01633 619129

CONNECTING A GENERATOR TO RUN A THREE PHASE APPLIANCE



PHASE INVERTER PLUG FITTED

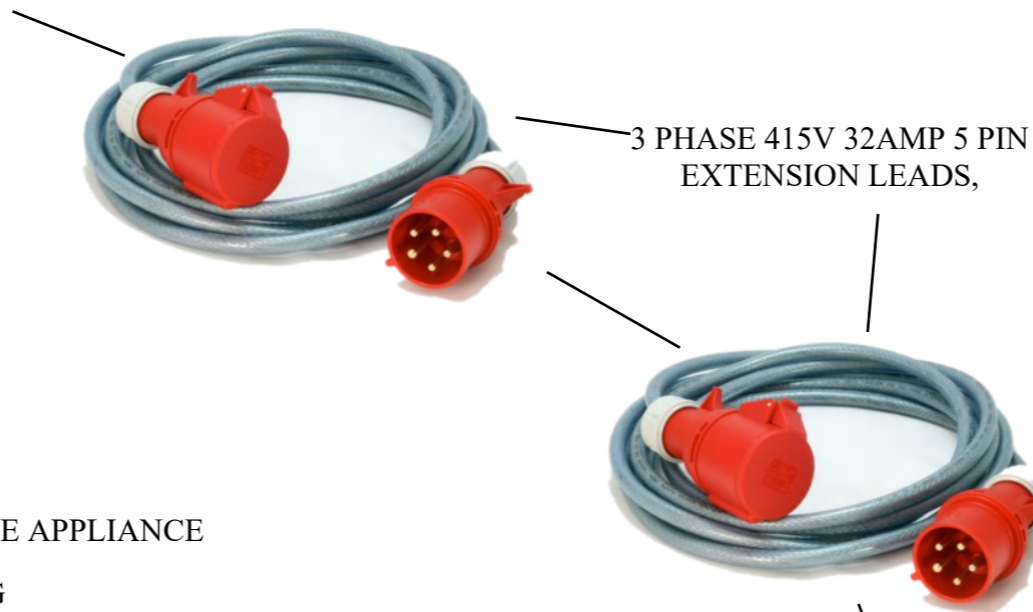

- CONNECT APPLIANCES AS ABOVE FROM THE GENERATOR TO THE APPLIANCE
- START GENERATOR UP AND MAKE SURE APPLIANCE IS RUNNING
- THEN CHECK THE APPLIANCE IS GOING THE CORRECT WAY
- THIS MEANS ON A FLOOR SAW THAT THE BLADE IS CUTTING DOWN
- IF DOESNT TURN THE APPLIANCE MAY HAVE A PHASE ROTATION PLUG FITTED TO WHICH A FLAT BLADE SCREWDRIVER CAN BE USED TO TURN PHASES OVER.
- IF NOT THE L2 AND L3 WIRE HAS TO CHANGED INSIDE PLUG AT FLOOR SAW

